


Installation instructions for MK chain tensioner 2.0 ©

[MOZ-ALGM-0130]

1. Remove old tensioner if available.
2. The hole that accommodates the eccentric must be 12mm (should fit as possible!).
3. Deburr the hole so that the chain tensioner can lie flat on the tub.
4. Place the disk on the tray and mark the position of the holes (drill diameter 2.5mm) (Image 1)
5. Drill through with 3.0mm and countersink for the screw head (picture 2)
6. Press the pane against the tub side from the inside and screw it on from the outside with the screws.
7. Now insert the eccentric into the hole and screw in the M5. (Hand tight is enough for now) (Picture 3)
8. Now mount the idler/tension wheel, the shaft is fixed with the grub screw.
9. Chain winding.
10. Now the tension of the chain has to be adjusted and the M5 tightened, the whole thing can still be counteracted from the inside with the M5 nut!
11. Done

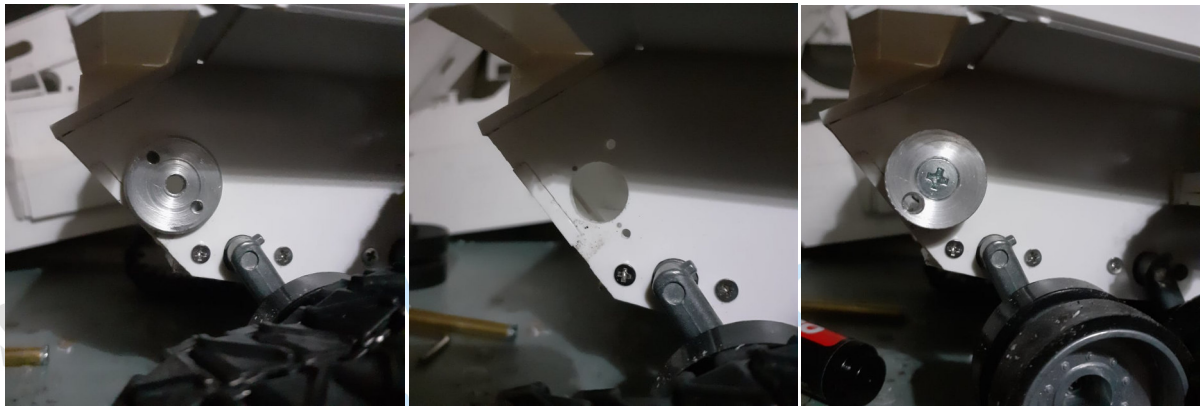

(To stiffen the tub you can also put a brass tube between the two M5 screws and clamp it with 2 M5 nuts - you can ask for this)

Warnings:

"Not suitable for children under 36 months."



The fast way to the shop, scan and already there ..